FOTOMATE
Digital Photo Frame
User Manual

FM 110 7inch - Black
FM 115 7inch - White

DISPLAYING LIFE'S CAPTURED MOMENTS

Cautions

Precautions and maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Photo Frame.
- Keep the Digital Photo Frame out of direct sunlight.
- Do not dismantle the Digital Photo Frame. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Photo Frame will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Photo Frame is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a card or USB device.
Failure to do so may cause damage to the card/USB and the unit.
To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

fotomate
DISPLAYING LIFE'S CAPTURED MOMENTS

CONGRATULATIONS ON YOUR PURCHASE OF THE FOTOMATE DIGITAL PHOTO FRAME GAURANTEE / WARRANTY CARD

PRODUCT SERIAL NUMBER: _____

This product carries a manufacture's guarantee of 6 months. See enclosed booklet.

Please comlete your details on this form and send to:

Via Email: admin@cnsmarketing.co.za
Fax: (011) 781 6000
Post: Po Box 2425 Randburg 2125

Correspondence will be sent to you on new developments and promotions

NAME: _____
POSTAL ADDRESS: _____

_____
CODE: _____
EMAIL: _____

STORE WHERE PRODUCT WAS PURCHASED

_____
DATE OF PURCHASE: _____
SALES PERSON: _____

FOR FURTHER INFORMATION PLEASE CONTACT OUR HELPDESK ON
011-781 6001

fOTOMATE
DISPLAYING LIFE'S CAPTURED MOMENTS

Preface

DPF—— let you can enjoy your happy time at every time, without computer or printing!

Your are appreciated for using the DPF, in order to enjoy your happy life brought by DPF, please read this manual carefully before using it.

Main features:

- Photo (JPEG)
- Music (MP3, WMA)
- Video (MP4, VOB, DAT, MPG, AVI)
- Calendar, clock , alarm and auto power on/off.

Technical specification:

- 7 inches TFT LCD panel resolution：480×234
- Supported media format: JPEG、MP1、MP2、MP3、MP4、VOB、DAT、WMA、AVI、DIVX
- Supported memory card: SD、MS、MMC
- Support U-disc (support P&P)
- Support calendar, clock, alarm, auto power on/off functions.
- Support AV output

Operation instruction:

1.1 IR controller instruction:

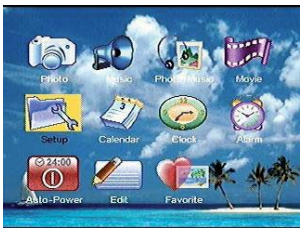

2.2 the DPF support reading U-disc & memory card. System will first read U-disc and then read memory card. If system have both U-disc & memory card at the same time, it will read U-disc by default.

fotomate
DISPLAYING LIFE'S CAPTURED MOMENTS

3. Settings

Select【SETUP】in main menu，press ENTER or OKkey to enter setup mode. In addition, you can directly press【SETUP】key of IR controller to enter setup mode. When you enter setup mode you will see the initial UI as below picture.

3.1 Photo settings:

Move the cursor to 1st position to select photo setting:

3.1.1 interval time of photo playing:

Use cursor to select interval time: have 5s、10s、15s、30s、1min、3min 6 options in all

3.1.2 Transition effect of photo playing

Use cursor to select transition effect , there all total 16 modes in all.

3.1.3 browse mode of photo

Use cursor to select “Browse”to decide the browse mode of 【Photo】function. There are two options: “thumbnail ”and “File manager”.

3.2 auto play setting

Move the cursor to 2nd position to select auto play setting:

3.2.1 Photo setting

Use cursor to select “Photo”，user can use this selection to turn on or turn off auto play function of 【Photo】. If user turn on it，when user enter【Photo】function，system will auto play photo.；if user turn off it, system will enter “File manager”or“thumbnail” to let user browse the photo.

3.2.2 Music setting

Use cursor to select “Music”，user can use this selection to turn on or turn off auto play function of 【Music】. If user turn on it，when user enter【Music】function，system will auto play music.；if user turn off it, system will enter “File manager”mode, user can select desired music file and press ENTER or OK to play it.

fotomate
DISPLAYING LIFE'S CAPTURED MOMENTS

3.2.3 Movie setting

Use cursor to select “Movie”，user can use this selection to turn on or turn off auto play function of 【Movie】. If user turn on it，when user enter【Movie】function，system will auto play movie.；if user turn off it, system will enter or“movie file browse” to let user browse the movie.

3.3 Display settings

Move the cursor to 3rd position to select Display setting:

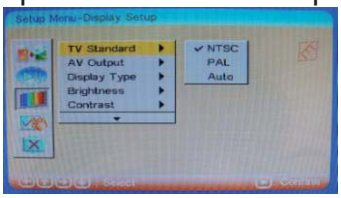

3.3.1 TVstandard

Use cursor to select “TV Standard”, user can select right standard according to their TV system. There are “NTSC”, “PAL” & “AUTO” 3 options in all.

3.3.2 AV Output setting:

Use cursor to select “ AV Output” to set TV-display mode or Panel-display mode.

3.3.3 Display Type setting

Use cursor to select “Display type” to set aspect ratio ,there are “16:9” , “4:3” , “ Auto” 3 options in all .

3.3.4 Brightness setting

Use cursor to select “Brightness”, user can set the brightness of picture,. There are “Normal”, “bright” & “Soft” 3 options in all.

3.3.5 contrast setting

Use cursor to select “Contrast”, user can set the contrast of picture. The range is from -4 ~ 0 ~ +4, 9 levels in all, the larger the number is, the higher the contrast is.

3.3.6 TFT Brightness setting

Use cursor to select “TFT Brightness”, user can set the brightness of TFT. The range is from -7 ~ 0 ~ +7, 15 levels in all, the larger the number is, the higher the brightness is.

3.3.7 TFT Contrast setting

Use cursor to select “TFT Contrast”, user can set the contrast of TFT. The range is from -7 ~ 0 ~ +7, 15 levels in all, the larger the number is, the higher the contrast is.

3.3.8 TFT saturation setting

Use cursor to select “TFT Saturation”, user can set the saturation of TFT. The range is from -7 ~ 0 ~ +7, 15 levels in all, the larger the number is, the higher the saturation is.

FOTOMATE
DISPLAYING LIFE'S CAPTURED MOMENTS

3.4 custom setup

Move the cursor to 4th position to select custom settings.

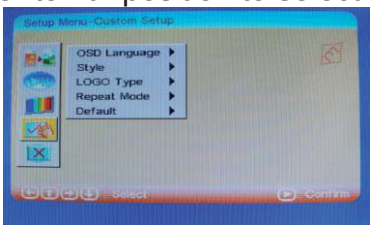

3.4.1 OSD language setting

Use cursor to select “OSD language” to set the system’s OSD language, there are “English”, “French”, “German”, “Italian”, “Spanish”, “Portuguese”, “Dutch” and “Polish” 8 languages in all.

3.4.2 style setting

Use cursor to select “Style” to set desired UI style, there are 4 UI styles in all.

3.4.3 LOGO Type setting

Use cursor to select “LOGO Type” to set desired LOGO type, there two LOGO types in all .

3.4.4 repeat mode setting

Use cursor to select “Repeat Mode” to set the mode of repeat playing. There are “off”, “one”, ”folder” and “all” 4 options in all.

Off: cancel repeat mode

One: repeat current playing file

Folder: repeat current folder

All: repeat all files in current media

3.4.5 Default setting

Use cursor to select “Default” to let user restore system to default setting.

4 Photo playing

4.1select【Photo】in the main menu，and then press ENTER or OK ，system will auto detect linked media (U-disc、memory card). If there is not any media linked, system will return to main menu.

4.2 If there is media linked and reading OK, system will enter photo browse mode according to “browse mode of photo” in SETUP (3.1.3)

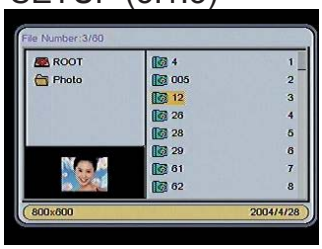

(File Manger)

(thumbnail)

4.3 in【Photo】mode，system only support photo playing, the supported format is JPG.
4.4 if user turn on photo auto play, system will auto play photo after entering【Photo】mode.

5 Music playing

5.1 select【Music】in the main menu，and then press ENTER or OK ，system will auto detect linked media
(U-disc、memory card). If there is not any media linked, system will return to main menu.
5.2 If there is media linked and reading OK, system will enter file manger, as below picture:

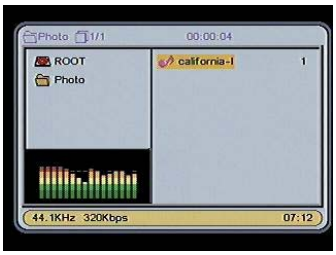

5.3 in【Music】mode，system only support music playing, the supported format is MP2/MP3/WMA..

5.4 if user turn on music auto play, system will auto play music after entering【Music】mode.

6 Photo+Music playing

6.1 select【Photo+Music】in the main menu，and then press ENTER or OK ，system will auto detect linked media (U-disc、memory card). If there is not any media linked, system will return to main menu.
6.2 If there is media linked and reading OK, system will enter file manger, as below picture:

6.3 in【Photo+Music】mode，system only support photo and music playing, the supported format is JPG & MP2/MP3/WMA.
6.4 if user turn on photo+music auto play, system will auto play Photo+music after entering【Photo+Music】mode.

7 Movie playing

7.1 select【Movie】in the main menu，and then press ENTER or OK ，system will auto detect linked media
(U-disc、memory card). If there is not any media linked, system will return to main menu.

fotomate
DISPLAYING LIFE'S CAPTURED MOMENTS

7.2 If there is media linked and reading OK, system will enter file manger, as below picture:

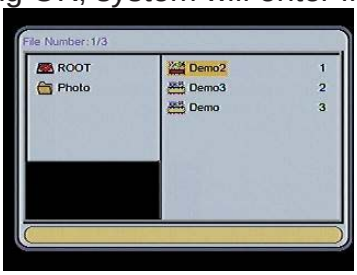

7.3 in 【 Movie 】 mode， system only support movie playing, the supported format is DAT/MPG/VOB/MP4。

7.4 if user turn on movie auto play, system will auto play movie after entering【Movie】mode

8 Calendar

8.1Calendar display

select【Calendar】in the main menu，and then press ENTER or OK to enter calendar setting mode, select “Display” and press ENTER or OK to enter calendar display

8.2 week search

User can use direction key to adjust month/year to search the week.

8.3 date setting

select【Calendar】in the main menu，and then press ENTER or OK to enter calendar setting mode, select “set data” and press ENTER or OK to enter calendar date setting. User can use direction key to set the calendar and date. When user finished date setting, he can press “OK” to confirm or “cancel” to cancel setting. Move cursor to “Exit” and then press ENTER or OK to exit setting.

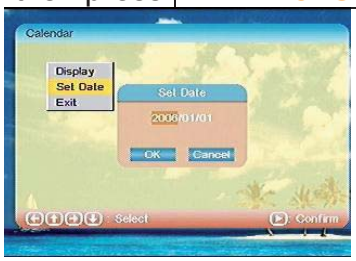

9 clock setting

9.1 Clock display

9.1.1 select【Clock】in the main menu，and then press ENTER or OK to enter clock setting mode

fotomate
DISPLAYING LIFE'S CAPTURED MOMENTS

9.1.2 select “Display” to let user can select “clock” or “clock & calendar”. If user select “clock” and then press ENTER or OK , system will show the clock time as below:

9.1.3 If user select “clock & calendar” and then press ENTER 或 OK , system will show the clock time as below:

：

9.2 Clock setting

Select “set time” and press ENTER or OK to enter time setting, user can use direction key to set time. When user finished time setting, he can press “OK” to confirm or “cancel” to cancel setting. Move cursor to “Exit” and then press ENTER or OK to exit setting.

10 Alarm

在select【Alarm】in the main menu，and then press ENTER or OK to enter alarm setting mode

fotomate
DISPLAYING LIFE'S CAPTURED MOMENTS

10.1alarm on/off setting

Select “on” to turn off alarm and select “off” to turn off alarm.

10.2 alarm time setting

Select “set time” and press ENTER or OK to enter time setting, user can use direction key to set time. When user finished time setting, he can press “OK” to confirm or “cancel” to cancel setting. Move cursor to “Exit” and then press ENTER or OK to exit setting.

10.3Alarm ring

When alarm is triggered, system will pop up a dialog, user can press any key to exit alarm ring mode at that time.

11 Auto-power On/Off setting

select【Auto Power】in the main menu，and then press ENTER or OK to enter auto power setting mode

11.1Power on enable setting

Select “on” or “off” to let user can turn on or turn off auto power on function.

11.2 Auto power off setting

Select “on” or “off” to let user can turn on or turn off auto power off function.

11.3 auto power on/off time setting

Select “set time” and press ENTER or OK to enter time setting, there are “power on” and “power off” two items in all, user can use direction key to set time. When user finished time setting, he can press “OK” to confirm or “cancel” to cancel setting. Move cursor to “Exit” and then press ENTER or OK to exit setting.

12 Photo Edit

在select【Edit】in the main menu，and then press ENTER or OK to enter photo edit mode. In this mode user can select “copy”, “delete” or “exit”.

fotomate
DISPLAYING LIFE'S CAPTURED MOMENTS

12.1copy photo

This function allow user to copy photo on media, and use the copied photo as screen saver. User can use ↑ ↓ to select photo, and then press ENTER or OK to confirm，the selected photo will be marked by a red frame, and press ENTER or OK again to cancel the selection. When user finished the selection, he can press ← → key to “save” button，press ENTER or OK to save all selected photo.

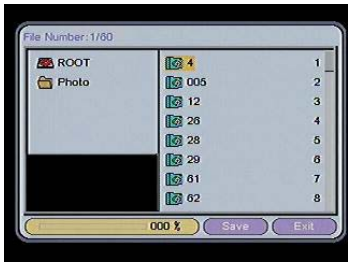

12.2 delete photo

This function allow user to delete saved photo. User can move cursor to “delete” button, and then press ENTER or OK to enter delete mdoe, then use ← → key to select the photo to be deleted, and then press ENTER or OK to delete selected photo. User also can select “delete all” to delete all saved photo. In addition, user can use ← → to select photo to be sorted.

13 Photo favorite

在select【Favorite】in the main menu，and then press ENTER or OK to enter favorite photo mode，user can press ENTER or OK to select desired photo to play.

14. function switchover

Press 【SELECT】on the remote controller to back to the main menu, execute the switchover of all kinds of functions through direction key. The functions include 11 kinds of functions such as 【picture】, 【music】, 【picture +music】,【movie】, 【settings】, 【calendar】, 【clock】,【alarm clock】, 【automatic power off】, 【edit】, 【favorite】.

15 Screen saver

15.1 No screen saver mode

System will not enter screen save in below modes:

【Photo】, 【Music】, 【Photo+Music】, 【Movie】【Clock】and【Calendar】

fotomate
DISPLAYING LIFE'S CAPTURED MOMENTS

15.2 screen saver mode

In normal case, if the DPF does not play any media and last over 20s, system will enter screen saver mode, to protect your TFT LCD panel， user can press any key to exit screen saver, return to before mode.

16 common problem and solution:

Problem	Reason & solution
System can not power on	● Make sure the power adapter is plugged OK ● Make sure the Power switch is at “ON”
	Go to maintenace point for checking if problem still exist.
Can not read memory card	● Memory card is not plugged OK ● No playable files on card ● The file format is not supported ● Photo format supported：JPEG ● Music format supported：MP3/WMA ● Movie format supported：DAT/MPG/VOB/MP4。。
System can not display the photo when you enter photo mode	● The picture format is not supported ● No photo in the card Attention: the DPF only support JPEG format, other format , like TIFF,BMP,GIF is not supported.
Video output is abnormal	● Make sure AV-out cable is plugged OK ● Make sure the TV mode of AV-output is the same as TV’s.
The picture size is too small on TFT	● The resolution of video/picture is small。 ● Use Zoom function to view it .
Black blocks around the picture	●This is normal, because different DC take photo with different solution and different resolution.

fOTOMATE
DISPLAYING LIFE'S CAPTURED MOMENTS

Manufactured and Distributed by

No 2 Noble Road
Bordeaux. Randburg
Tel (011 781 6001)
www.cnsmarketing.co.za